# ARCHITECTURE LINEAR LIGHT

## Installation Guide



#### PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before installation and use

- 1. To reduce the risk of death, personal injury, or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards, read all warnings and instructions included with and the fixture box and fixture labels.
- 2. Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- 3. Commercial installation, service, and maintenance of luminaires should be performed by a qualified licensed electrician.
- 4. If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician. Please abide by all relevant country, regional, and local code requirements and regulations when installing this luminaire. Wiring must be in accordance with NEC and all applicable local codes.
- 5. DO NOT INSTALL DAMAGED PRODUCT! This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- 6. Do not make or alter any holes unnecessarily in an enclosure of wiring or electrical components during the installation.
- 7. Turn off electrical power at the fuse or circuit breaker box before wiring fixture to the building power.
- 8. Verify that supply voltage is correct by comparing it with the luminaire label information. Do not install with supply voltage that exceeds the rated input voltage of the luminaire.

#### CAUTION

- Do not install in wet locations. For dry and damp use only.
- The electrical rating of this product is 120-277V. Installer must confirm that there is 120-277V at the fixture before installation.
- Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

### SUSPENSION MOUNT INSTALLATION (STAND ALONE UNIT)




















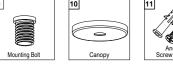













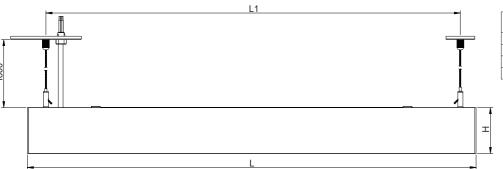

Size	L	W	Н	suggestion
2FT	23.82'	2.48'	3.15'	21.65'
4FT	47.44'	2.48'	3.15'	45.28'
6FT	71.06'	2.48'	3.15'	68.90'
8FT	94.67'	2.48'	3.15'	92.52'

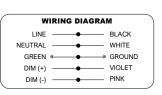

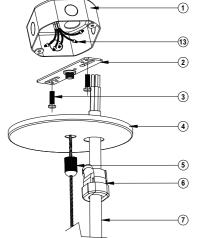


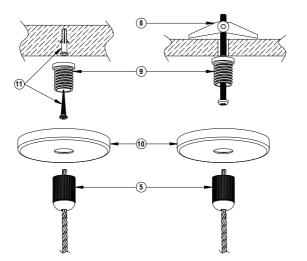




sprngarch.com 11325 Cash Rd, Suite 100, Stafford, TX, 77477 (832)500 - 4634

#### Pendant installation

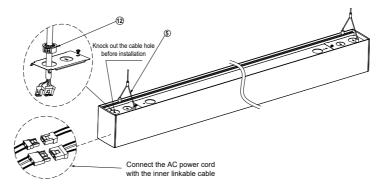

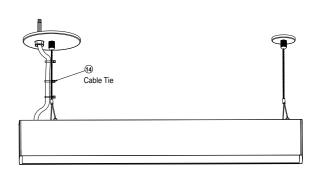

#### SURFACE MOUNT INSTALLATION (STAND ALONE UNIT)




















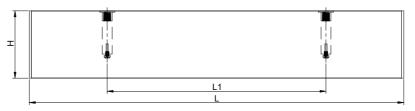


w			

Size	L	W	Н	Installation Hole spacing suggestion
2FT	23.82'	2.48'	3.15'	14.17'
4FT	47.44'	2.48'	3.15'	37.80'
6FT	71.06'	2.48'	3.15'	61.42'
8FT	94.67'	2.48'	3.15'	85.03'

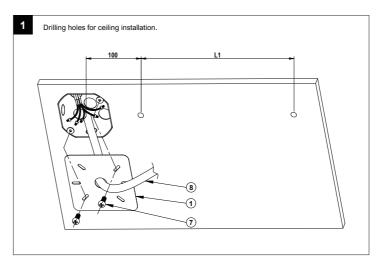

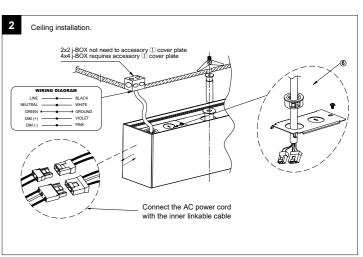

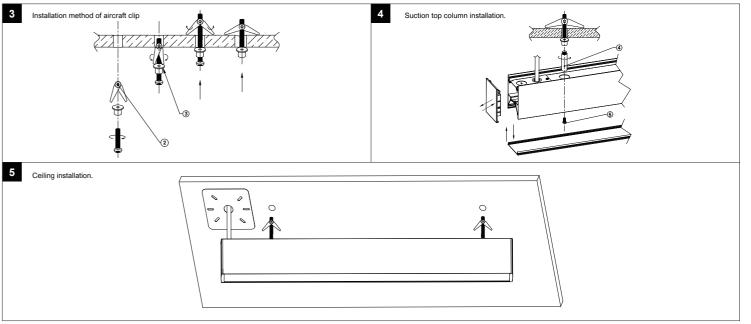



### WALL MOUNT INSTALLATION (STAND ALONE UNIT)
























Size	L	W	Н	Installation spacing suggestion
2FT	23.82'	2.48'	3.15'	13.78'
4FT	47.44'	2.48'	3.15'	41.33'
6FT	71.06'	2.48'	3.15'	64.96'
8FT	94.67'	2.48'	3.15'	88.58'

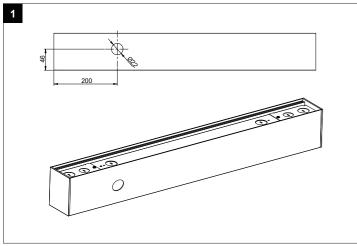

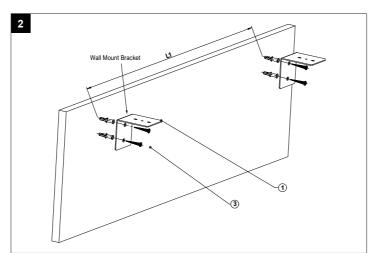

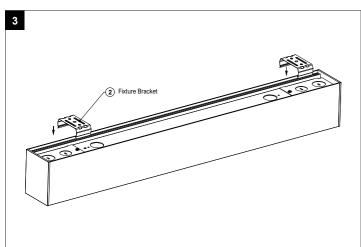

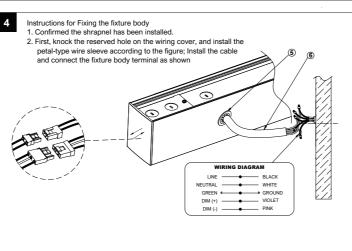

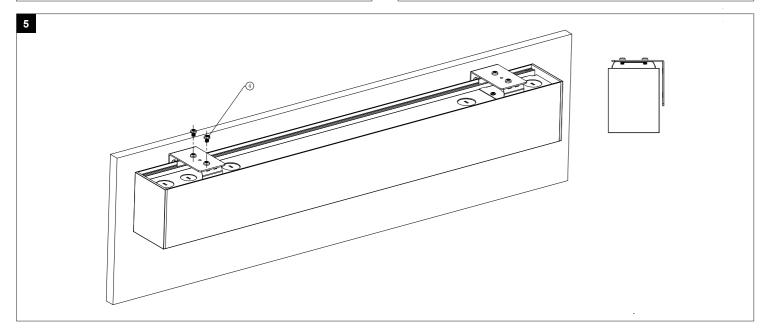





## **UP LIGHT INSTALLATION**

- 1. Use a screwdriver to open the cover of the connection as shown in the diagram.


- Install the up light module and finish the wiring.
   1. Provided the connection of the connectio

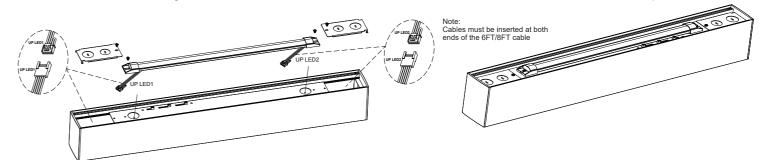


#### LINK PATTERN INSTALLATION

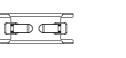



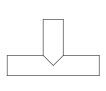

"T" Joiner

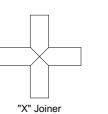






"-" Joiner


"L" Joiner

- 1. Remove the wiring cover of the fixture using a screwdriver according to the figure, and take out accessories 1 and 2 in the accessory bag.

  2. First, insert the connecting bracket (accessory 1) on the lamp body, and then insert the pin into the hole shown in the fixture (knurled position into the fixture).

  3. After connecting the docking terminal, connect the support to the fixture and press the buckle, and then install the cable cover.

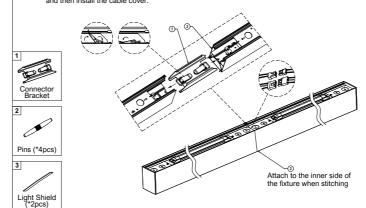

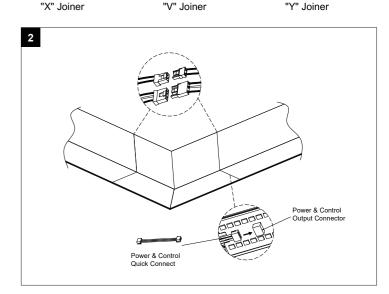

## **DIFFUSER ACCESSORIES (OPTIONAL)**

Optional continuous rolling lens which can reach seamless continue runs up to 100' is available.

