
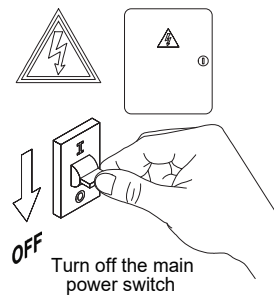


WARNING


PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION.
PLEASE READ THE INSTRUCTIONS BEFORE INSTALLATION AND USE.

- To reduce the risk of death, personal injury, or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards, read all warnings and instructions included with and the fixture box and fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service, and maintenance of luminaires should be performed by a qualified licensed electrician.
- If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician. Please abide by all relevant country, regional, and local code requirements and regulations when installing this luminaire. Wiring must be in accordance with NEC and all applicable local codes.
- **DO NOT INSTALL DAMAGED PRODUCT!** This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- Do not make or alter any holes unnecessarily in an enclosure of wiring or electrical components during the installation.
- Turn off electrical power at the fuse or circuit breaker box before wiring fixture to the building power.
- Verify that supply voltage is correct by comparing it with the luminaire label information. Do not install with supply voltage that exceeds the rated input voltage of the luminaire.
- **CAUTION:** Do not install in wet locations. For dry and damp use only. Disconnect or turn off power before installation or servicing. The electrical rating of this product is 120–277V. Installer must confirm that there is 120–277V at the fixture before installation.


CORD PENDANT MOUNT WITH SQUARE HOUSING

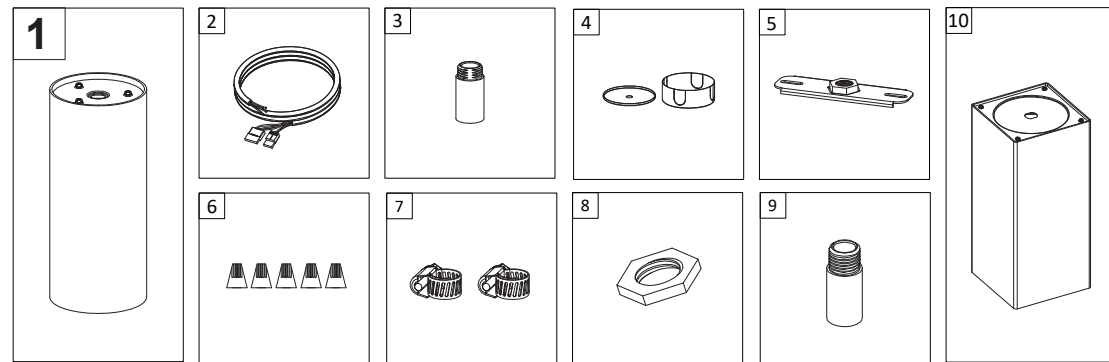


1. Remove the "A" part of Accessory 1 and the "B" part of Accessory 10.

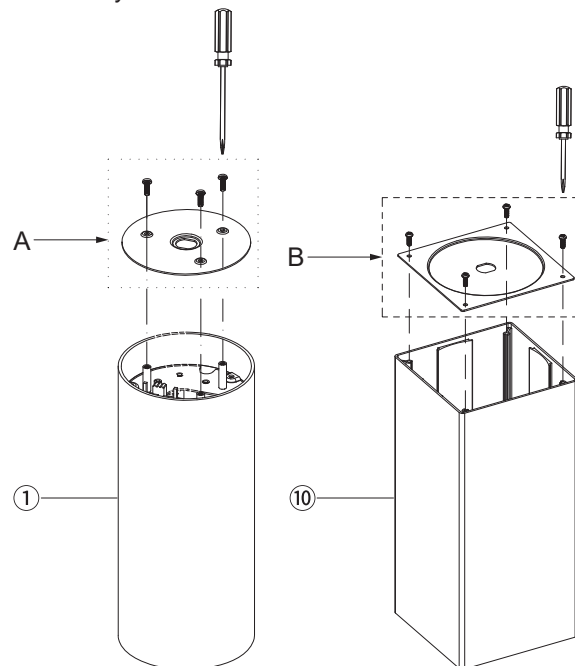


2. Trim the non-tinned end of Accessory 2 to the desired length.
 Note: The default wire lengths are 1.2m and 3.6m. The step can be skipped if no trimming is needed.

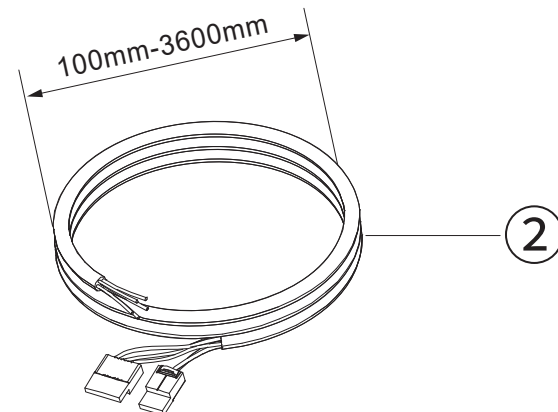


3. a: Tighten Accessory 3 and "B" with Accessory 8.
 b: Tighten Accessory 4 and 5 with Accessory 9.
 c: Slide Accessory 7 onto 2, pass 2 through the assembly and tighten them with Accessory 7.

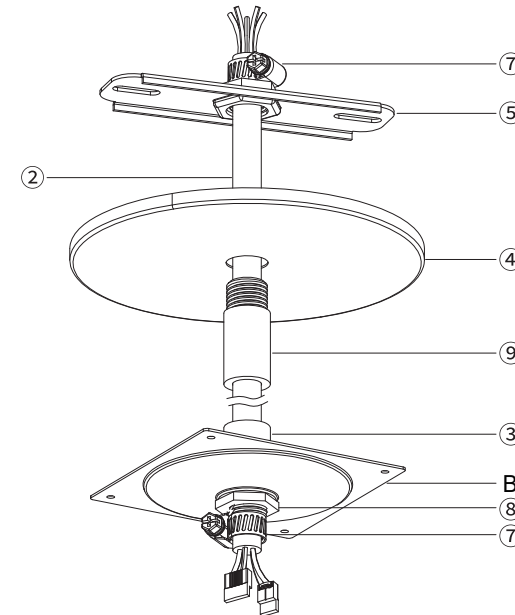


5. Secure Accessory 5 to the J-Box with the #8-32 screws supplied with the J-Box.

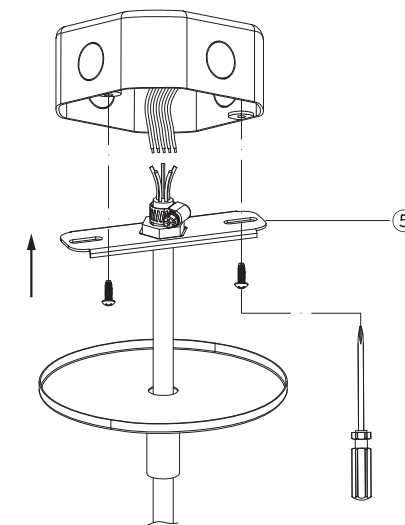


7. Tuck the wires into the J-Box. Then, lift the Accessory 4 and tighten Accessory 9 clockwise to secure the canopy in place.

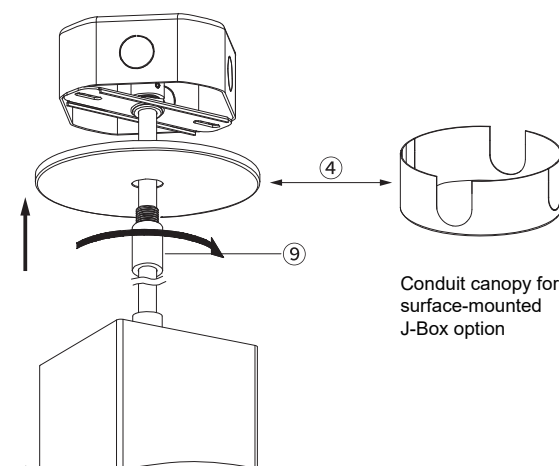

4. a: Put Accessory 1 into 10.
 b: Plug 2P and 3P terminals of Accessory 10 and 2.
 c: Tighten Accessory 10 with the M3 screws of "B".

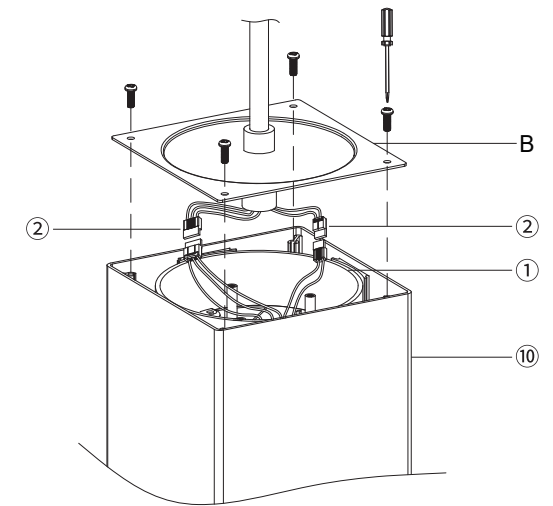


6. Connect the wires of the luminaire body to the mains power with Accessory 6.

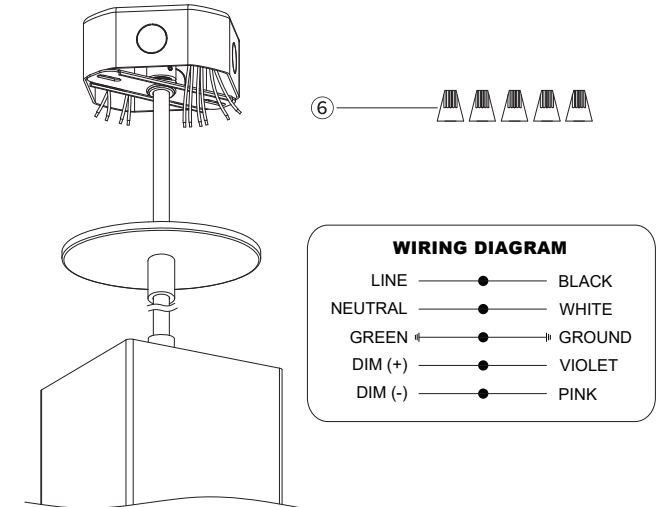


WIRING DIAGRAM

LINE	●	BLACK
NEUTRAL	●	WHITE
GREEN	●	GROUND
DIM (+)	●	VIOLET
DIM (-)	●	PINK


8. The installation is complete. Power on and light up.

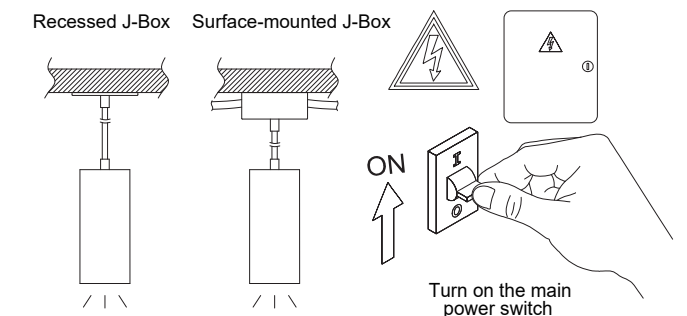


STEM PENDANT MOUNT WITH SQUARE HOUSING

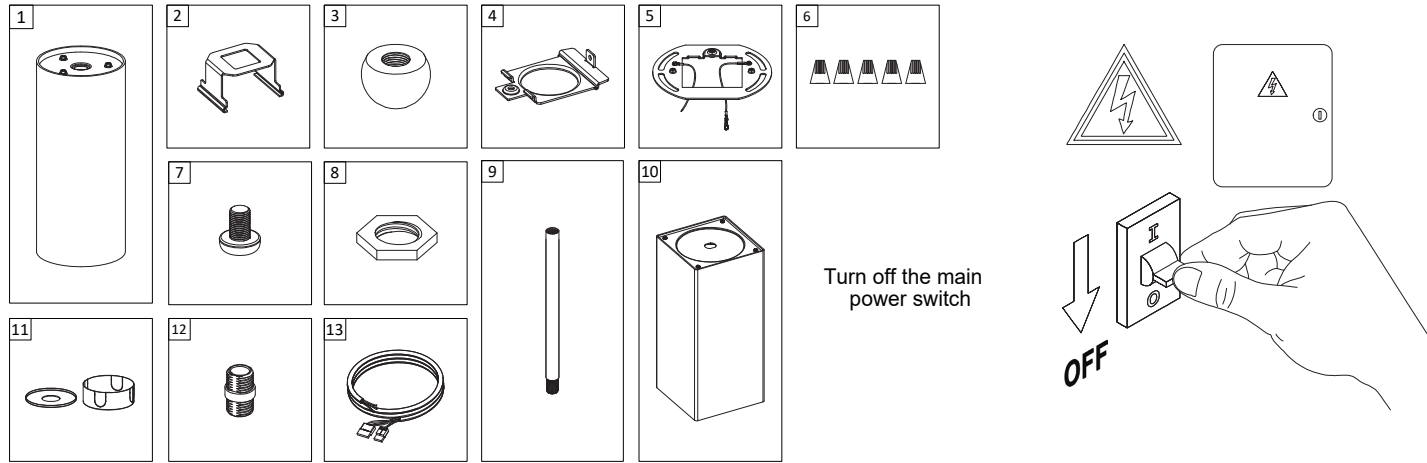


1. Remove the "A" part of Accessory 1 and the "B" part of Accessory 10.

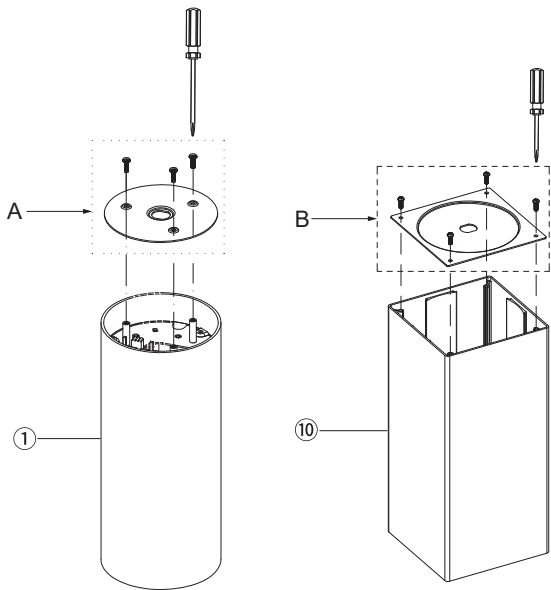


2. a: Tighten Accessory 12 and "B" with 8, and then tighten them with Accessory 9.
b: Thread Accessory 9 through 4 and tighten it with Accessory 3.
c: Slide Accessory 2 into 4 in the direction of the arrow.
d: Insert Accessory 11 into 9 and tighten them together by rotating clockwise. Then, pass Accessory 13 through the middle of Accessory 9.

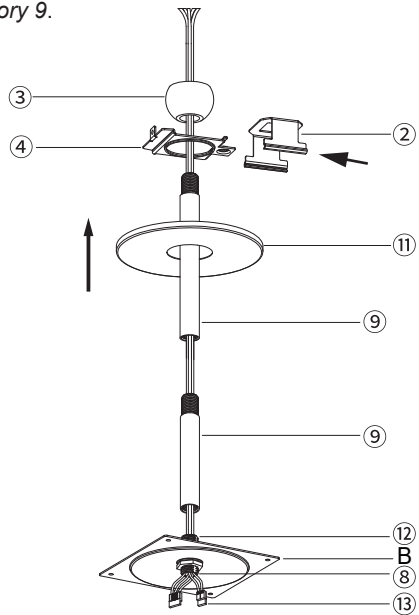


3. a: Put Accessory 1 into 10.
b: Plug 2P and 3P terminals of Accessory 1 and 10.
c: Tighten Accessory 10 with the M3 screws of "B".

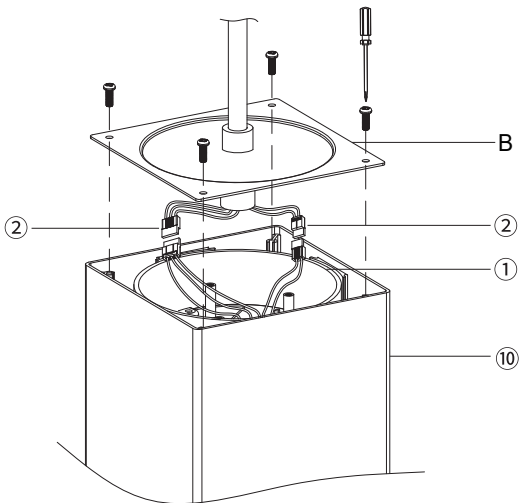


4. Secure Accessory 5 to the junction box with the #8-32 screws supplied with the J-Box.

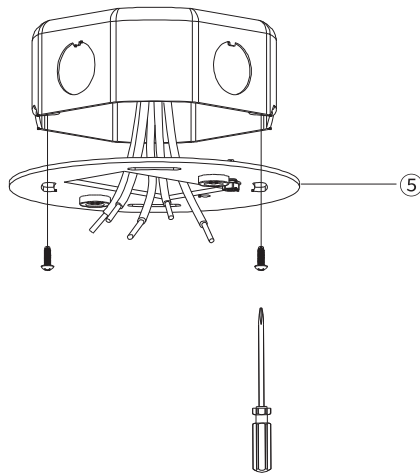

5. Fix the safety cable on Accessory 4.

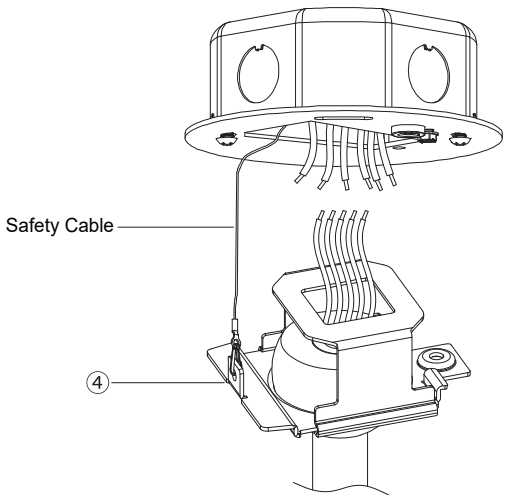


6. Connect the wires of the luminaire body to the mains power with Accessory 6.

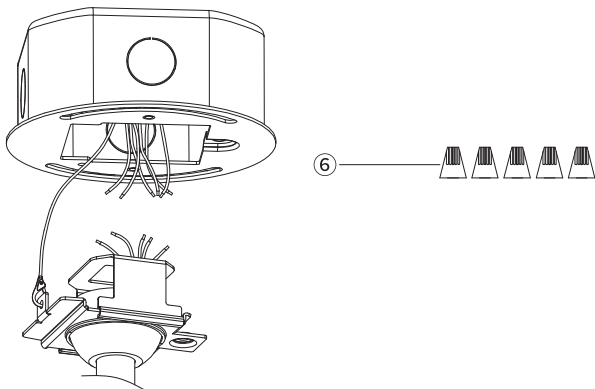


WIRING DIAGRAM

LINE	●	BLACK
NEUTRAL	●	WHITE
GREEN	●	GROUND
DIM (+)	●	VIOLET
DIM (-)	●	PINK


7. Place Accessory 4 into 5 in direction A, push it to the left in direction B, push it upward in direction C, and finally push it to the right in direction D.

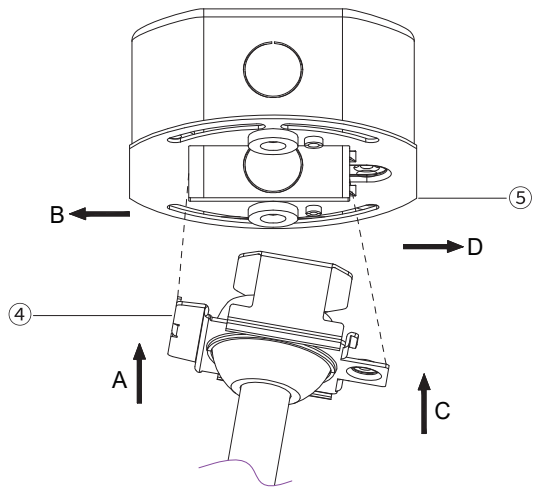

8. The effect is as follows. After hanging, lock it with Accessory 7.

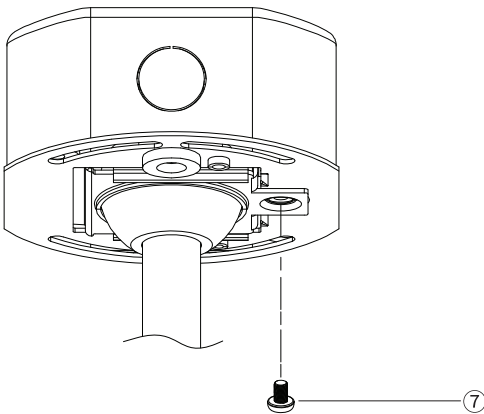

9. Push Accessory 11 upwards and hold it with the magnet.

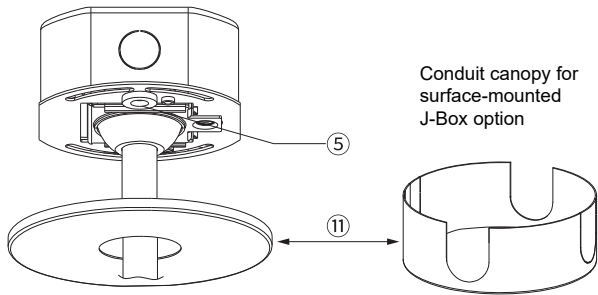

10. The installation is complete. Power on and light up.

